
Query of error messages

Only the current error can be acknowledged
(The errors must be rectified irrespective of acknowledgement)
Up to 10 errors can be stored (irrespective of type)

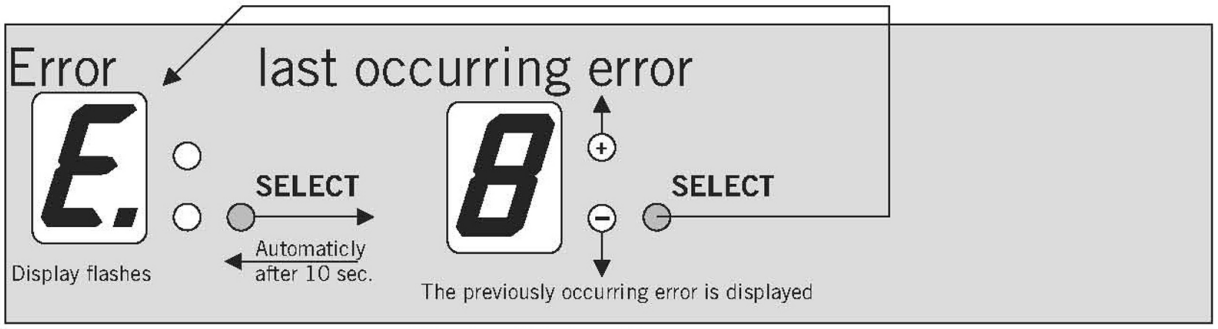

Meaning of display codes

0	No error in memory
1	Obstruction
2	Lock
3	Program switch
4	Light barrier
5	Incremental encoder
6	Back up accumulator
7	System
8	EMERGENCY STOP operated
9	Learning cycle parameter error
A	Motor fault
c	Force test
d	Overcurrent at motor
F	DCW
L	Relay test fault